


1/6

FIG. 1

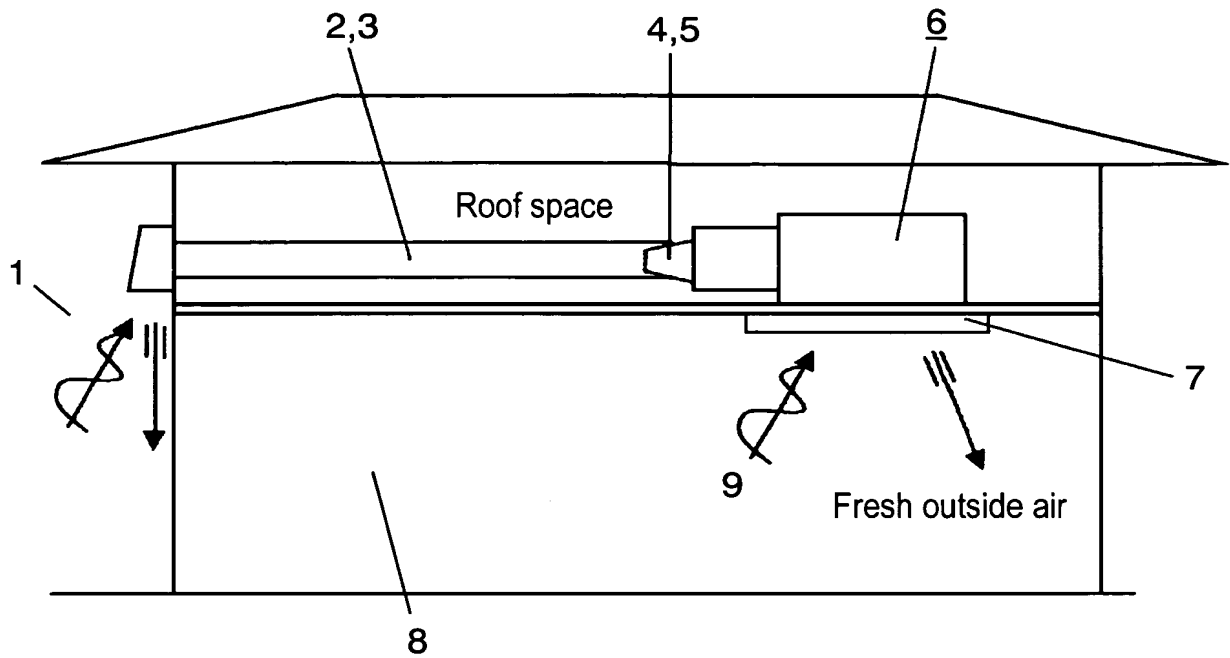

2/6

FIG. 2


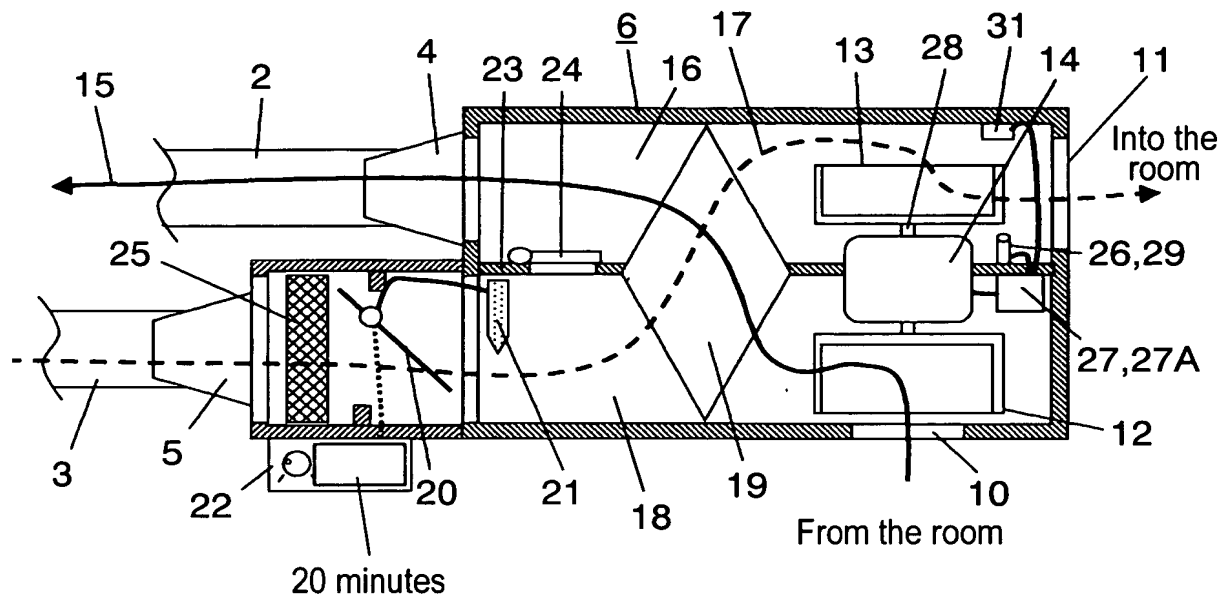


FIG. 3

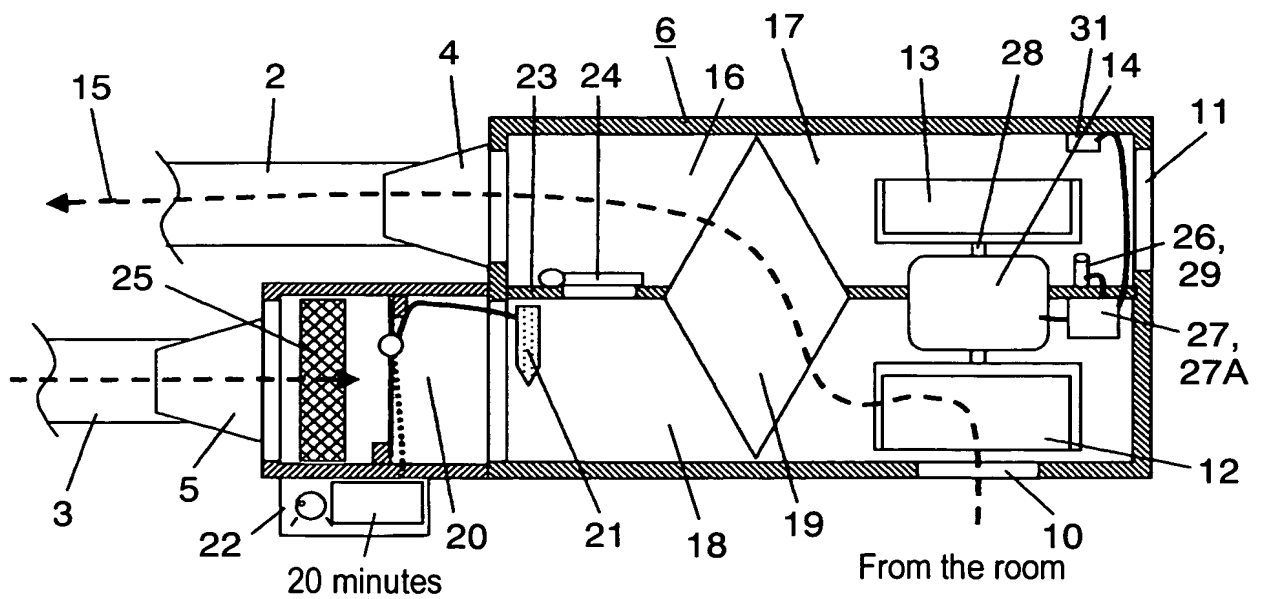

3/6

FIG. 4


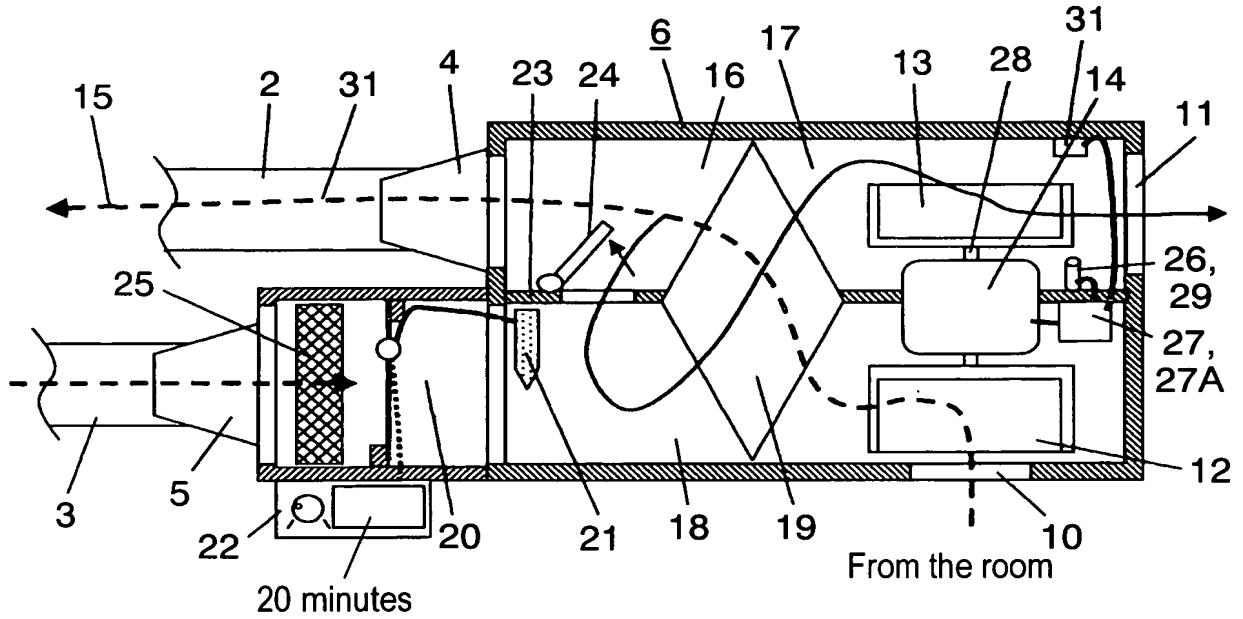


FIG. 5

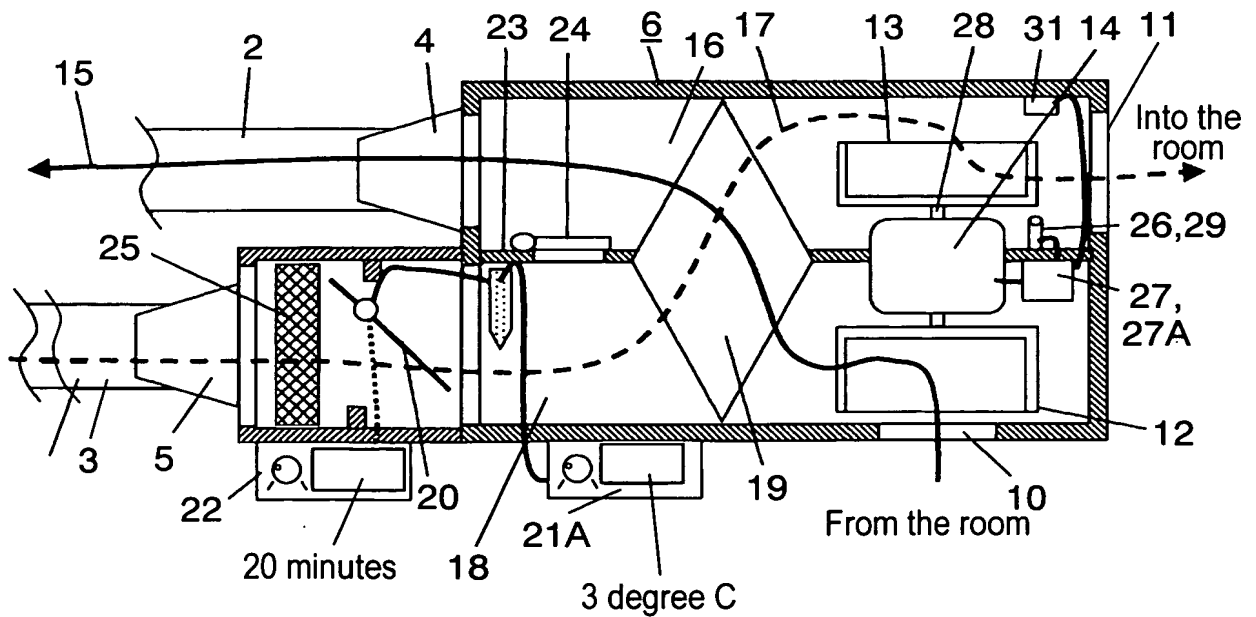

4/6

FIG. 6



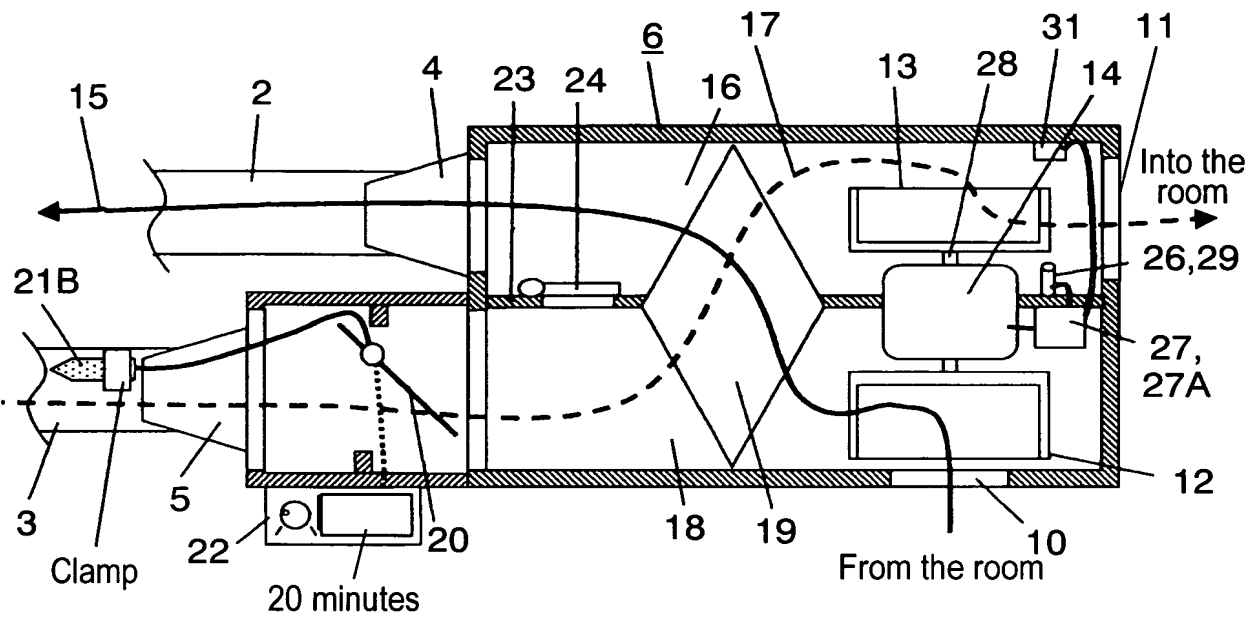


FIG. 7

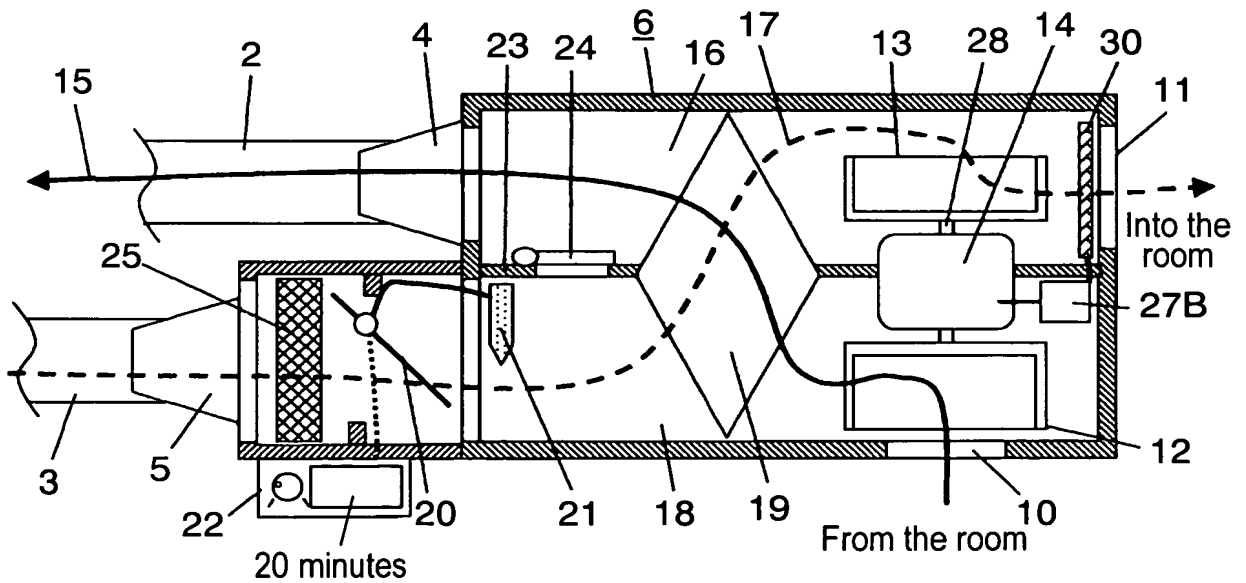

5/6

FIG. 8

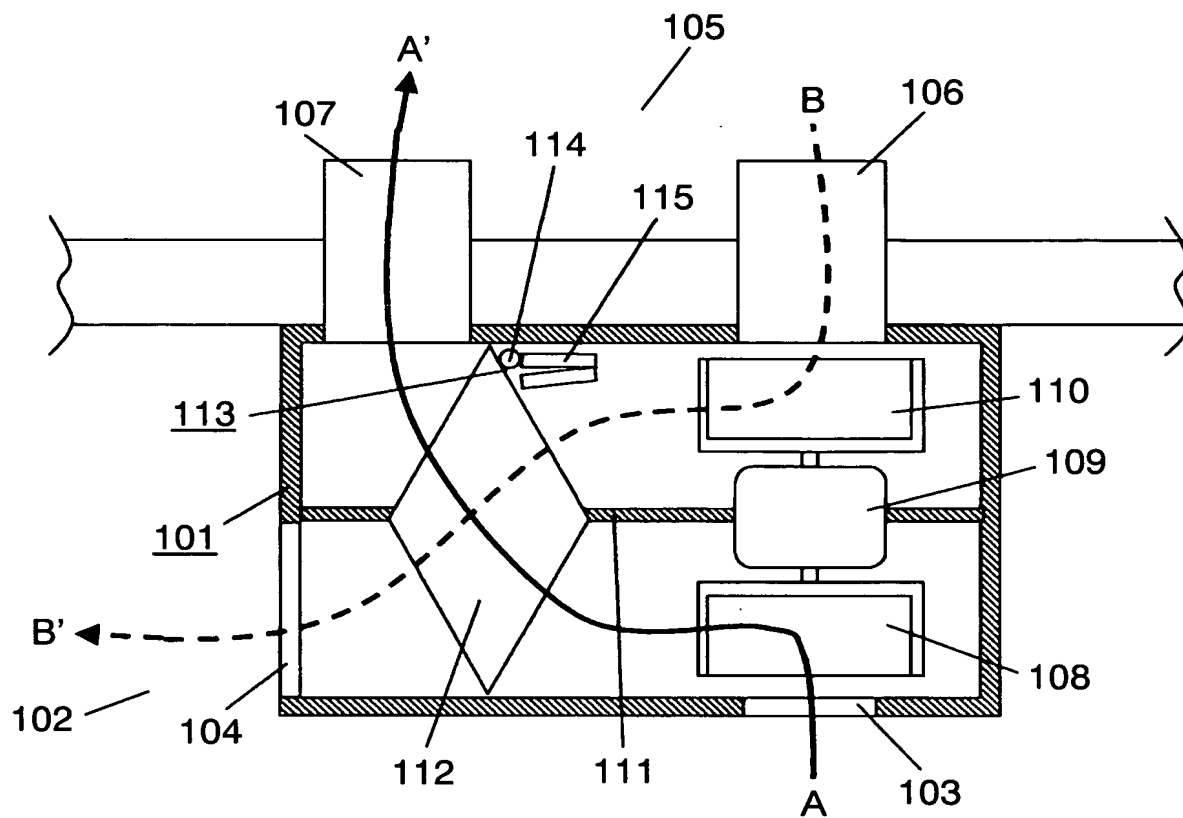

6/6

Reference numerals in the drawings

- 1 Outdoors
- 2 Exhaust-air duct
- 3 Supply-air duct
- 4 Exhaust-air coupling section
- 5 Supply-air coupling section
- 6 Ventilating unit
- 7 Opening on underside
- 8 Room
- 9 Stale air
- 10 Exhaust-air outlet
- 11 Supply-air inlet
- 12 Exhaust-air fan
- 13 Supply-air fan
- 14 Motor
- 15 Exhaust-air
- 16 Exhaust-air channel
- 17 Supply-air
- 18 Supply-air channel
- 19 Heat exchanger
- 20 Cut-off damper
- 21, 21A, 21B Supply-air temperature sensing means
- 22 Timer
- 24 On/off valve
- 25 Heating means
- 26 Rpm sensing means
- 27, 27A, 27B Rpm control means
- 29 Static pressure sensing means
- 30 Air volume sensing means